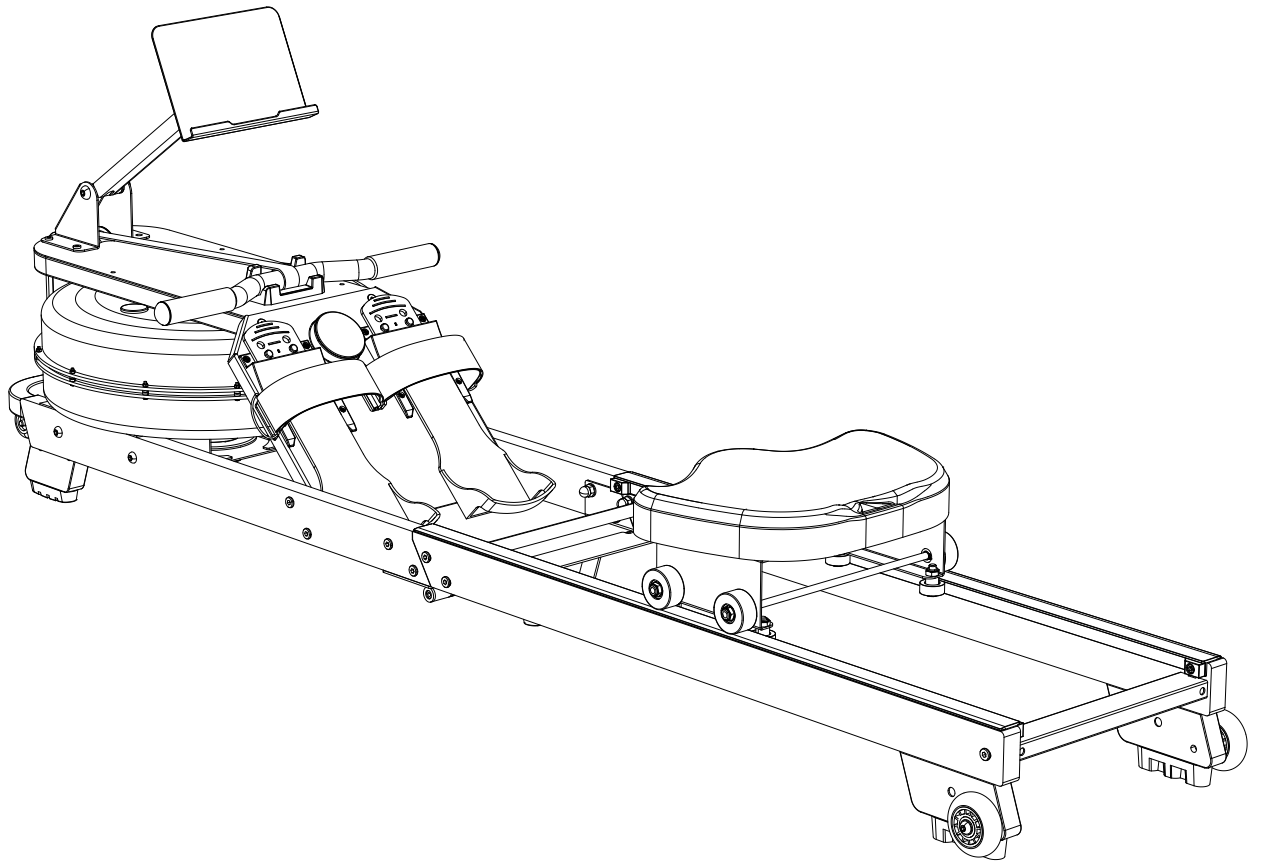 


Brugsanvisning

FLOWROW AQUA | ASG4652



Vigtig sikkerhedsinformation

Opbevar venligst denne instruktionsmanual til senere brug.

1. Læs før brug: Læs omhyggeligt alt indhold i denne manual før montering og brug. Korrekt installation, vedligeholdelse og betjening er afgørende for sikker og effektiv træning. Sørg for, at alle brugere er bekendt med alle advarsler og forholdsregler.
2. Kontakt en læge: Brugere bør konsultere en læge baseret på deres fysiske tilstand for at forhindre sundheds- eller sikkerhedshændelser under træning. Hvis du tager medicin, der påvirker puls, blodtryk eller kolesterol, skal du følge lægens råd før træning.
3. Overvåg din krop: Forkert eller overdreven træning kan skade dit helbred. Stop straks, hvis du oplever symptomer som hovedpine, trykken for brystet, uregelmæssig hjerterytme, åndenød, svimmelhed eller kvalme. Genoptag kun efter lægelig godkendelse.
4. Hold børn og kæledyr væk: Dette udstyr er kun til brug for voksne. Sørg for, at børn og kæledyr holdes i sikker afstand.
5. Stabil placering: Brug på en fast, plan overflade. Beskyt gulve eller tæpper for at forhindre skader. Hold en minimumsafstand på 0,5 m omkring udstyret for at undgå forhindringer.
6. Inspektion før brug: Kontroller, at alle bolte og møtrikker er forsvarligt spændt før hver brug.
7. Kun ved regelmæssig vedligeholdelse og reparation af de dele, der er tilbøjelige til at beskadige, slide og gå i stykker, kan sikker brug af dette træningsudstyr sikres.
8. Defekter eller støj: Stop brugen med det samme, hvis der findes defekte dele under montering/reparation, eller hvis der opstår usædvanlige lyde. Genoptag først efter at alle problemer er løst.
9. Korrekt påklædning: Bær passende træningstøj. Undgå løstsiddende beklædningsgenstande, der kan blive fanget i bevægelige dele og forårsage personskade eller fastklemning.
10. Vægtgrænse: Dette udstyr er certificeret i henhold til EN957 Klasse HC. Maksimal brugervægt: 150 kg.
11. Ikke-medicinsk brug: Dette produkt er ikke beregnet til medicinske formål.
12. Sikker håndtering: Brug korrekte løfteteknikker eller søg hjælp, når du flytter udstyret, for at undgå rygskader.




PRODUCT ACCESSORIES

Liste over dele i kassen

Åben kassen og tag følgende dele op til montering

NO.	Beskrivelse	Antal
A	Hovedramme med vandtank	1
C	Vandpumpe	1
E	Håndtagsholder	1
G	AA Batteri	2
I	Vandrensningstabletter	1

NO.	Beskrivelse	Antal
B	Sæde	1
D	Tablet holder	1
E	Unbrakonøgle S4/S5	1
G	Manual	1

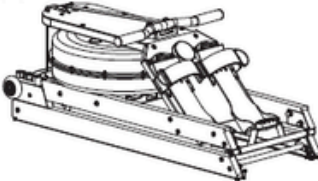   
A 	B 	C 	D 
E 	F 	G 	H 
I 			

02/

{ ! a [lbD



¢wlb mY

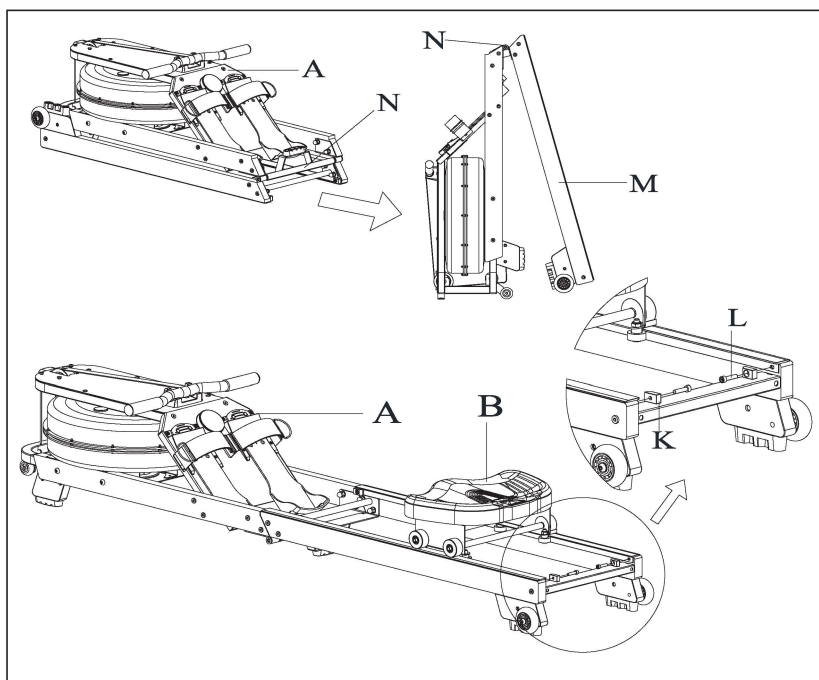 m¢ ¢I-Ǝ LJN2RřdzĴúŠú dzŘ I-Ʀ ĴI-NUúzyŠyŹ
 2Ǝ áúĴ K2ŰŠŘNĴI-YŸŠyó!ú 2LJNÚŠžáú¢
 [ŋƎ LJN2RřdzĴúŠú ƦfI-Řú LJň Ǝ2NĴŘŠyŹ 2Ǝ
 K2fŘ ŘŠyŠyŠ KňyŘ LJň ŠYyŠúă
 NdzYŘŠ NĐŽNŲ óbú 2Ǝ ŘŠyI-yŘŠyLJň
 ƦĐŽNĴyăăĴĴyŸyó a ú¢ {ĴdzŲ tŠú dzŘI-Ř
 Ʀ2NĴ I-ú dzYŘƎĴ I-ú ĴŠYŸyŠ ƦĴyăNŸyŠ¢
 H¢ . NdzƎ dzYŲNĴI-ĴyĐŽƦŠy {p óCú úĴ I-ú
 Ʀ2ŠNĴyŠ dzYŲNĴI-ĴyĐŽƦŠy



¢wlb HŸ

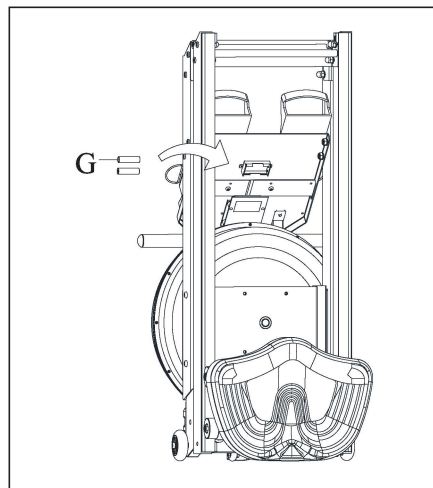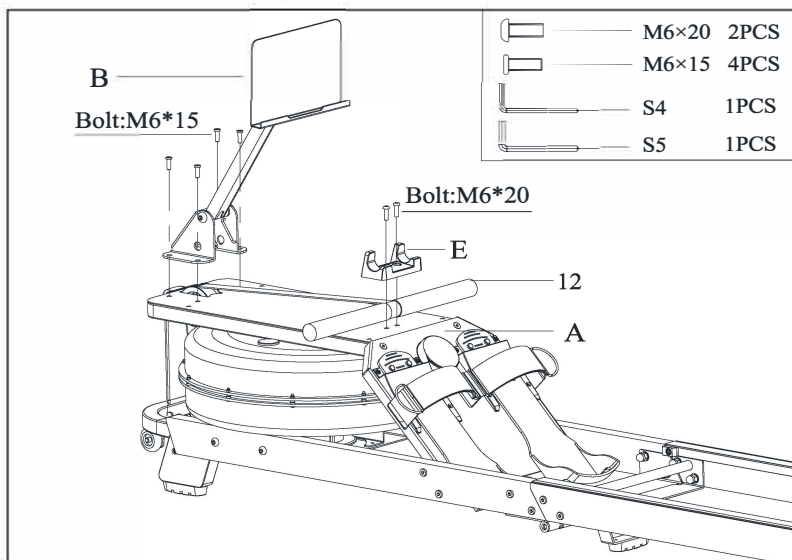  m¢ . NdzƎ dzYŲNĴI-ĴyĐŽƦŠy {n óCú
 úĴ I-ú Ʀ2ŠNĴyŠ a¢ƦHĴăĴNdzŠNĴyŠ ón
 áúĴŲ 2Ǝ a¢ƦmpăĴNdzŠNĴyŠ óH
 áúĴŲ ƦNĴI- K2ŰŠŘNĴI-YŸŠyó!ú¢
 H¢ . NdzƎ ŘŠ Ʀ2ŠNĴyŠŘŠ a¢ƦHĴă
 ăĴNdzŠNĴ óH áúĴŲ úĴ I-ú ƦI-ăúĐĐŽNŠ
 KňyŘúI-ăăŲŠăƦI-ăŠú ó9ú LJň
 K2ŰŠŘŠyKŠŘŠy¢ ƦfI-ŲŠNĴ
 KňyŘúI-ăŠú ómHŲ LJň
 KňyŘúI-ăăŲŠăƦI-ăŠú ó9ú¢
 o¢ . NdzƎ ŘŠ Ʀ2ŠNĴyŠŘŠ a¢Ʀmpă
 ăĴNdzŠNĴ ón áúĴŲ úĴ I-ú ƦI-ăúĐĐŽNŠ
 úI-ŲŲŠúK2fŘŠNŸyó5ú LJň
 K2ŰŠŘŠyKŠŘŠy¢



TRIN 3:

Batteriinstallation: Sæt AA-batterierne (G) i batterikassen. Hele installationen er nu fuldført.

INSTRUKTIONER TIL BRUG AF PUMPE

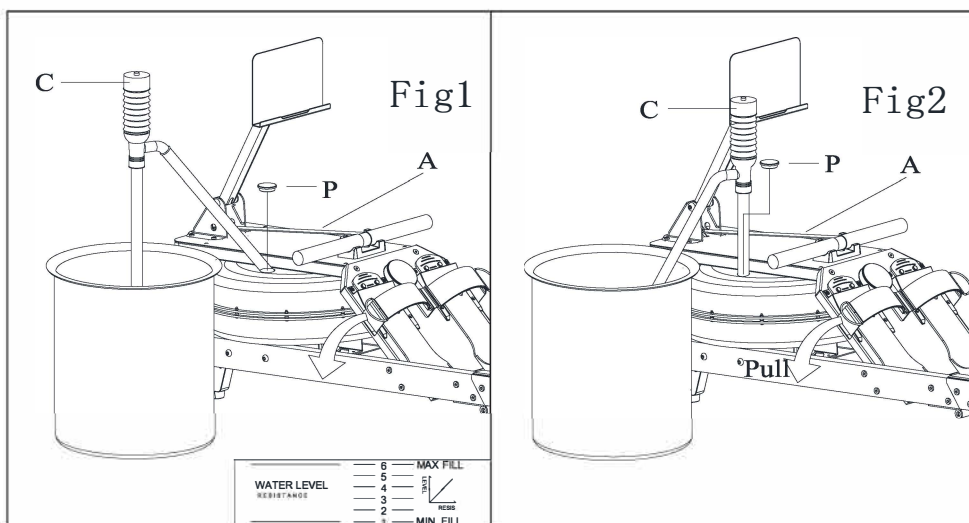 
Sørg for, at alle dele er korrekt spændt, inden du bruger romaskinen:

1. Fjern tankproppen (P) fra toppen af tanken.

2. Sådan fyldes vand på tanken (Fig. 1)

- 1) Sæt den lige slange fra vandpumpen (C) i en beholder med vand og den fleksible slange fra vandpumpen i romaskinens tank.
- 2) Sørg for, at vandbeholderen er højere end romaskinens vandtank.
- 3) Klem pumpen flere gange for at fylde vand på romaskinens tank, indtil den ønskede modstand er opnået i henhold til markeringerne på siden af tanken.
- 4) Jo mere vand der er i tanken, desto højere er modstanden.
- 5) Sæt tankproppen (P) på igen, når vandstanden er nået.

3. For at tømme romaskinens vandtank skal du udføre påfyldningsproceduren i omvendt rækkefølge (Fig. 2).



NOTER

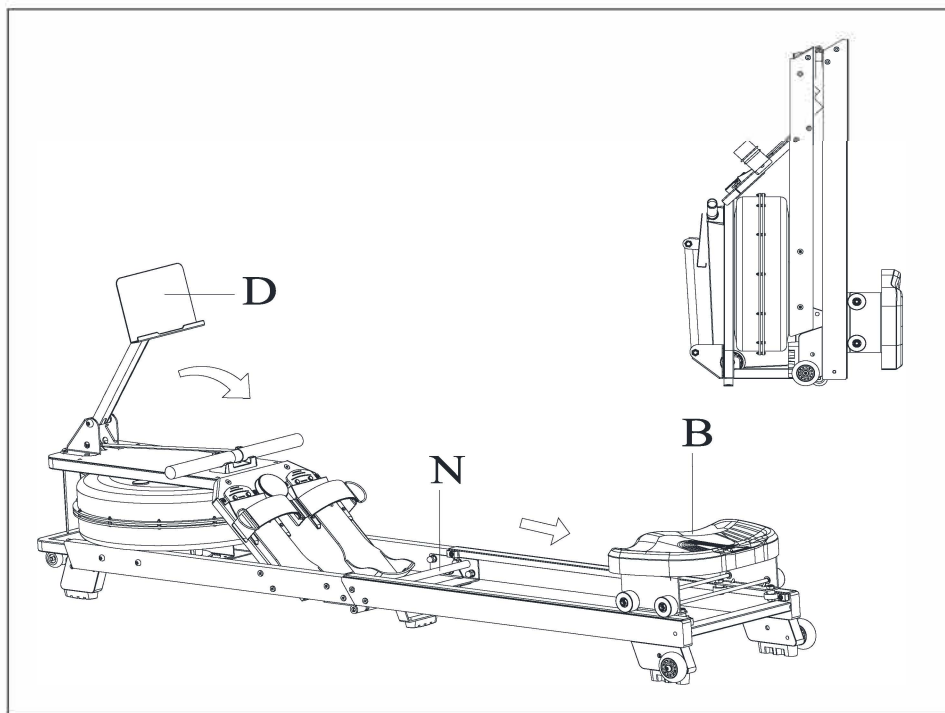 
- Kun postevand må bruges til at fylde vandtanken. Det er tilladt at tilsætte vandrensningstabletter (inkluderet i pakken), men brug ikke vandrensningstabletter af lav kvalitet eller blegemiddel, da de kan beskadige vandtanken og ikke er dækket af garantien.
- Tilsæt vandrensningstabletter hver 3. måned eller efter behov. Hvis vandkvaliteten er ekstremt uklar, skal vandet i tanken udskiftes.
- Vandet, der drænes fra tanken, er ikke egnet til drikkevand. Håndter det som spildevand.
- Hvis maskinen ikke bruges i længere tid, skal vandet pumpes ud af tanken, og maskinen stilles oprejst.

Vandstandsmærke:

- Vandstandsmærket er placeret på siden af vandtanken, og det maksimale vandniveau er angivet med niveau 6. Overskrid ikke dette vandniveau. Skader forårsaget af overskridelse af det maksimale vandniveau er ikke dækket af garantien.
- Modstanden afhænger af vandniveauet inde i tanken. Niveau 1 repræsenterer den laveste modstand, mens niveau 6 repræsenterer den højeste modstand.


Opbevaring af maskinen

Når du folder produktet sammen, skal du dreje tabletholderen (D) nedad. Flyt derefter sædehynden (B) til enden (for at forhindre, at sædehynden hurtigt falder ned og beskadiger produktet, når den foldes sammen). Hold fast i emnets runde rør (N) med hånden, og træk let op for at forhindre, at sædehynden hurtigt falder ned og beskadiger produktet, når den foldes sammen.



Sådan justerer du pedalremmen

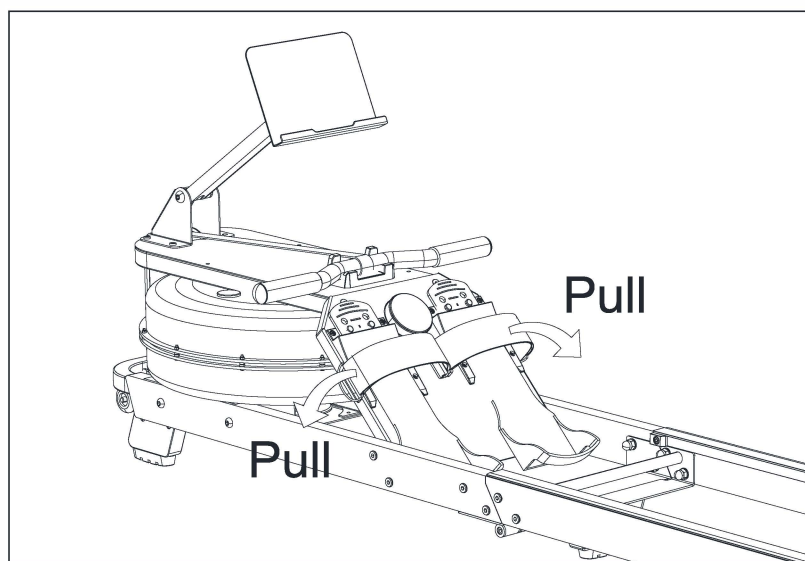 
Under brug skal du sidde på sædehynden, placere begge fødder på den justerbare pedal, justere pedalen til den tilsvarende hulposition baseret på dine fødders størrelse, og derefter fastgøre begge fødder med fodremmen. Stram fodremmen i den retning, der er vist på diagrammet, og fastgør den derefter godt til begge sider.




04

DISPLAY

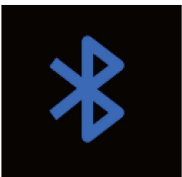 1. DATA DISPLAY

No.	Funktion	Display	Beskrivelse
1	Time		00:00 ~ 99:59 Efter at have registreret bevægelse, begynder timeren at tælle. Den stopper med at tælle 4 sekunder efter, at bevægelsen stopper.
2	Speed		Visningsområdet er fra 0,0 til 99,9 km/t.
3	Distance		Visningsområdet er fra 0,0 til 999,9 km.
4	Calories		Visningsområdet er fra 0,0 til 9999 kalorier, med et energiforbrug på 15 kalorier pr. kilometer.
5	WATT		Displayets effektområde er fra 0 til 999 watt.
6	Counts		Visningsområdet er fra 0 til 9999.
7	500m pace		Visningsområdet er fra 00:00 til 99:59.
8	SPM		Visningsområdet er fra 0 til 199.
9	Bluetooth		Display: Bluetooth forbundet. Vises ikke: Bluetooth ikke forbundet.

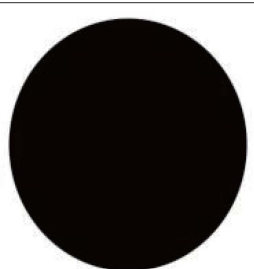 2. VISNINGSFUNKTIONSTABEL

No.	Item	Display	Beskrivelse
1	Display Overblik		1. Den viser træningsdata: "Tid", "Hastighed", "Distance", "Kalorier", "WATT", "Slag", "500 m tempo" og "Slagfrekvens". 2. Alle data vises i metriske enheder. 3. "Bluetooth-symbolet" angiver Bluetooth-forbindelsens status.
2	Pre-Workout Mode		1. Før træning viser LED-displayet kun symbolerne for tid, distance og kalorier. 2. Tryk på displayet for at skifte mellem disse symboler. 3. Drej displayet for at indstille de tilsvarende målværdier.
3	Mål indstillings tilstand		1. Berør displayskærmens kontakt til tidssymbolet, og drej displayet for at indstille tidsmålet. (Indstillingen af distance og kalorier sker på samme måde som tidsindstillingen). Tidsindstillingsværdien starter fra 1 minut, distanceindstillingsværdien starter fra 0,5 kilometer, og kalorieindstillingsværdien starter fra 1,0. 2. Start roningen direkte efter indstillingen. LED-displayet vil automatisk skifte mellem følgende værdier: Tid, Hastighed, Distance, Kalorier, Watt, Tag, 500 m Tempo og Tagfrekvens. 3. Berør displayskærmen for at fastsætte den aktuelle værdi. Ved at berøre den igen kan du fortsætte med at skifte mellem værdierne, indtil alle er blevet vist. Derefter vender LED-displayet tilbage til automatisk skift. 4. Hvis træningstiden når dit mål, udsender LED-displayet en "DiDi"-lyd.
4	Fri Træning Mode		1. Start roningen direkte. LED-displayet vil automatisk begynde at registrere dine træningsdata. 2. I dette tilfælde kan du indstille den aktuelle værdi på displayet ved at berøre displayet eller dreje det.
5	Dvale tilstand		Hvis du ikke træner i mere end 4 minutter, og der ikke indtastes data, går LED-displayet automatisk i dvaletilstand. Ved at ro igen eller berøre displayskærmen genstarter LED-displayet automatisk.
6	Nulstil Data		1. Tryk og hold på displayskærmen for at nulstille alle træningsdata. 2. Efter udskiftning af batteriet nulstilles den samlede distance.

3. DETALJERET BRUGSANVISNING

01. Skærmen viser "Tid", "Hastighed", "Distance", "Kalorier", "Watt", "Slag", "500 m tempo" og "Slagfrekvens" (fig. 1, fig. 2, fig. 3, fig. 4, fig. 5, fig. 6, fig. 7, fig. 8) i en standardcyklus, der skifter én gang pr. sekund.



Fig.1



Fig.2



Fig.3



Fig.4



Fig.5



Fig.6



Fig.7



Fig.8

02. Drej displayet med uret for at fastsætte den viste værdi på det tilsvarende funktionselement i følgende rækkefølge: Tid->Hastighed->Distance->Kalorier->Watt->Slag->500 m Tempo->Slagfrekvens->rotation (Fig. 9, Fig. 10, Fig. 11, Fig. 12, Fig. 13, Fig. 14, Fig. 15, Fig. 16). Drej mod uret for at fastsætte den viste værdi i den modsatte rækkefølge.



Fig.9



Fig.10



Fig.11



Fig.12



Fig.13



Fig.14



Fig.15



Fig.16

APP

- Søg efter "KINOMAP" i mobilappbutikken for at downloade appen.
- Scan QR-koden for at få instruktioner til Bluetooth-forbindelse.

Radiofrekvens: 2,4 GHz

Radiofrekvensbånd: 2402-2480 MHz

Maksimal RF-effekt: 5,09 dBm



FCC-ADVARSELSESKLÆRING

Ændringer eller modifikationer, der ikke udtrykkeligt er godkendt af den part, der er ansvarlig for overholdelse af reglerne, kan ugyldiggøre brugerens tilladelse til at betjene udstyret. Dette udstyr er testet og fundet i overensstemmelse med grænserne for en digital enhed i klasse B i henhold til del 15 af FCC-reglerne. Disse grænser er designet til at yde rimelig beskyttelse mod skadelig interferens i en boliginstallation. Dette udstyr genererer, bruger og kan udstråle radiofrekvensenergi, og hvis det ikke installeres og bruges i overensstemmelse med instruktionerne, kan det forårsage skadelig interferens for radiokommunikation. Der er dog ingen garanti for, at der ikke vil forekomme interferens i en bestemt installation. Hvis dette udstyr forårsager skadelig interferens for radio- eller tv-modtagelse, hvilket kan bestemmes ved at slukke og tænde udstyret, opfordres brugeren til at forsøge at korrigere interferensen ved hjælp af en eller flere af følgende foranstaltninger:-- Omorienter eller flyt modtagerantennen.-- Øg afstanden mellem udstyret og modtageren.-- Tilslut udstyret til en stikkontakt på et andet kredsløb end det, som modtageren er tilsluttet. -- Kontakt forhandleren eller en erfaren radio-/tv-tekniker for at få hjælp. Denne enhed overholder del 15 af FCC-reglerne. Brug er underlagt følgende to betingelser: (1) Denne enhed må ikke forårsage skadelig interferens, og (2) denne enhed skal acceptere enhver modtaget interferens, herunder interferens, der kan forårsage uønsket drift. Enheden er blevet evalueret til at opfylde de generelle RF-eksponeringskrav. Enheden kan bruges i bærbar eksponeringstilstand uden begrænsning.

ERKLÆRING FRA CANADA

Denne enhed indeholder licensfritagne sendere/modtagere, der overholder Innovation, Science and Economic Development Canadas licensfritagne RSS(er). Brug er underlagt følgende to betingelser:

1) Denne enhed må ikke forårsage interferens.


2) Denne enhed skal acceptere enhver interferens, herunder interferens, der kan forårsage uønsket drift af enheden.

Strålingseksponering: Dette udstyr overholder de canadiske grænseværdier for strålingseksponering, der er fastsat for et ukontrolleret miljø, for at opretholde overholdelse af IC's retningslinjer for RF-eksponering. Denne enhed må ikke placeres eller bruges sammen med andre antenner eller sendere.

Manufactured in China for:
Sport Scandinavia A/S
Niels Bohrsvej 2. 9900 Frederikshavn. DK
Tel: +45 70 126 126. E-mail: Info@spsca.dk
www.spsca.dk

User Manual

FLOWROW AQUA | ASG4652

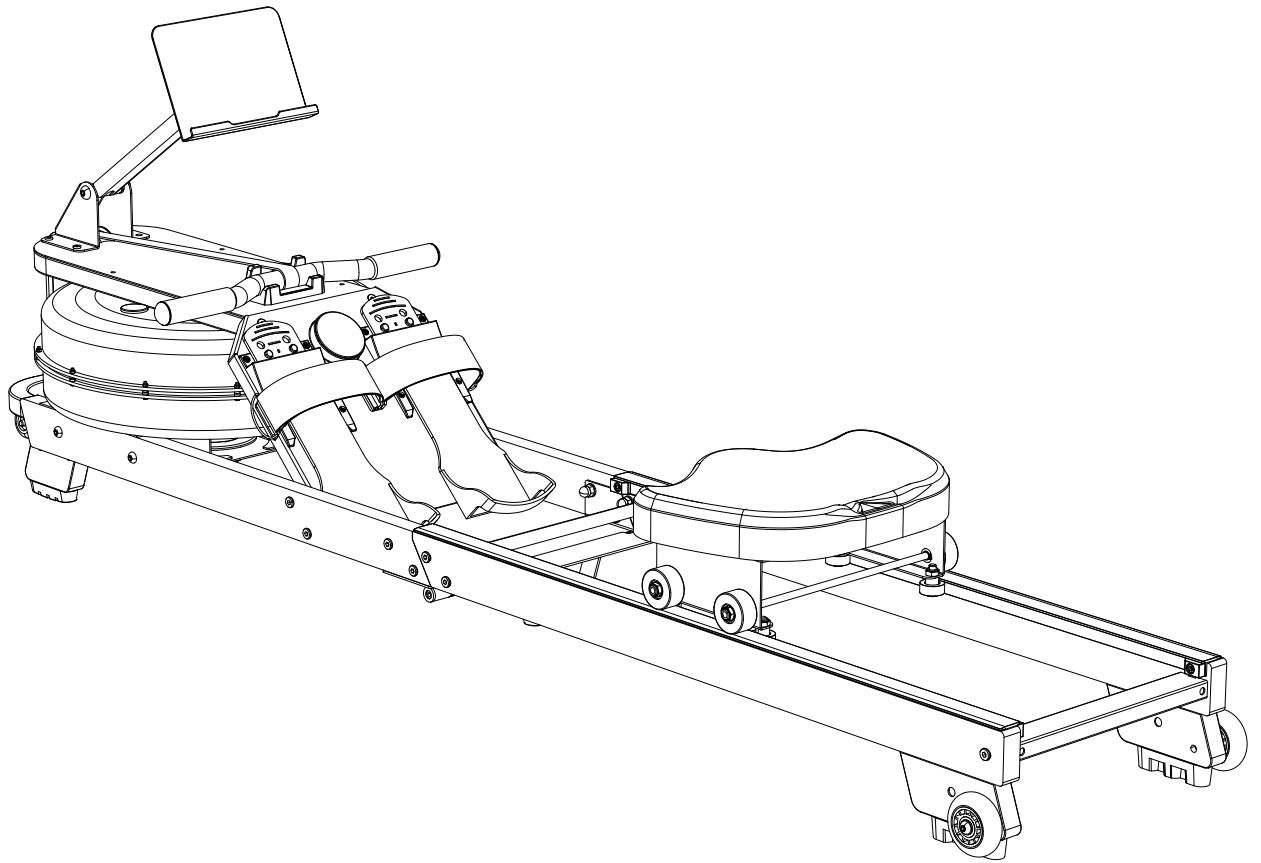 

Important Safety Knowledge

Please keep this instruction manual properly for future reference.







1. **Read Before Use:** Carefully read all contents of this manual before assembly and use. Proper installation, maintenance, and operation are critical for safe and effective training. Ensure all users are familiar with all warnings and precautions.
2. **Consult a Physician:** Users should consult a doctor based on their physical condition to prevent health or safety incidents during training. If you are undergoing medication that affects heart rate, blood pressure, or cholesterol, follow medical advice before training.
3. **Monitor Your Body:** Incorrect or excessive training may harm your health. Stop immediately if you experience symptoms such as headache, chest tightness, irregular heartbeat, shortness of breath, dizziness, or nausea. Resume only after medical clearance.
4. **Keep Children & Pets Away:** This equipment is for adult use only. Ensure children and pets are kept at a safe distance.
5. **Stable Placement:** Use on a firm, level surface. Protect floors or carpets to prevent damage. Maintain a minimum clearance of 0.5m around the equipment to avoid obstacles.
6. **Pre-Use Inspection:** Check that all bolts and nuts are securely tightened before each use.
7. **Only by regularly carrying out maintenance and repairs on the parts that are prone to damage, wear, and breakage can the safe use of this training equipment be ensured.**
8. **Defects or Noise:** Stop use immediately if defective parts are found during assembly/repair or if unusual noises occur. Resume only after resolving all issues.
9. **Proper Attire:** Wear appropriate training clothing. Avoid loose garments that may get caught in moving parts, causing injury or entrapment.
10. **Weight Limit:** This equipment is certified to EN957 Class HC. Maximum user weight: 150KG.
11. **Non-Medical Use:** This product is not intended for medical purposes.
12. **Safe Handling:** Use proper lifting techniques or seek assistance when moving the equipment to avoid back injury.

PRODUCT ACCESSORIES

Packing List

Open the package and take out the following parts for assembly:

No.	Description	Qty.	No.	Description	Qty.
A	Main Frame with Tank	1	B	Seat	1
C	Water Pump	1	D	Tablet Holder	1
E	Handle Fixer	1	F	Hexagon WrenchS4 /S5	1
G	AA Battery	2	H	Manual	1
I	Water purification tablets	1			

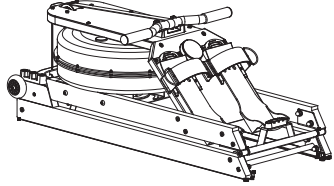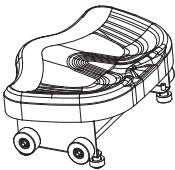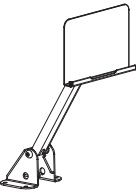      
A 	B 	C 	D 
E 	F 	G 	H 
I 			

ASSEMBLY MODE

STEP 1:

1.Take the product out of the carton and stand the main frame (A) upright. Lay the product flat on the ground, holding one hand on the round tube of the workpiece (N) and the other on the guide rail (M). Push outward slightly to prevent pinching your fingers.

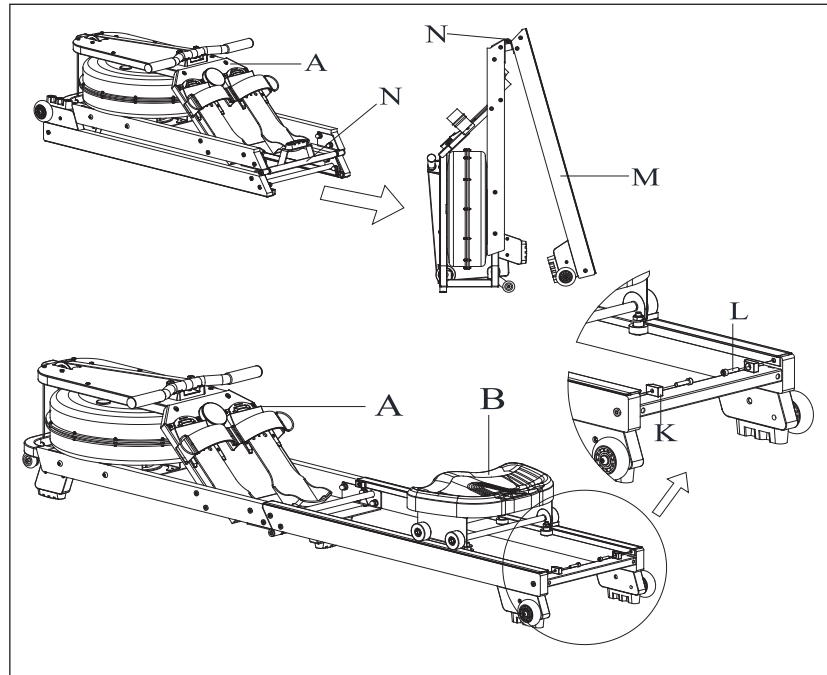 
2.Use the hexagon wrench S5 (F) to remove the hex

**STEP 2:**


1.Use the hexagon wrench S4 (F) to remove the M6*20 screws (4 pieces) and the M6*15 screws (2 pieces) from the main frame (A).

2.Use the removed M6*20 screws (2 pieces) to fix the Handle fixer (E) onto the main unit. Place the handle (12) onto the handle fixer(E).

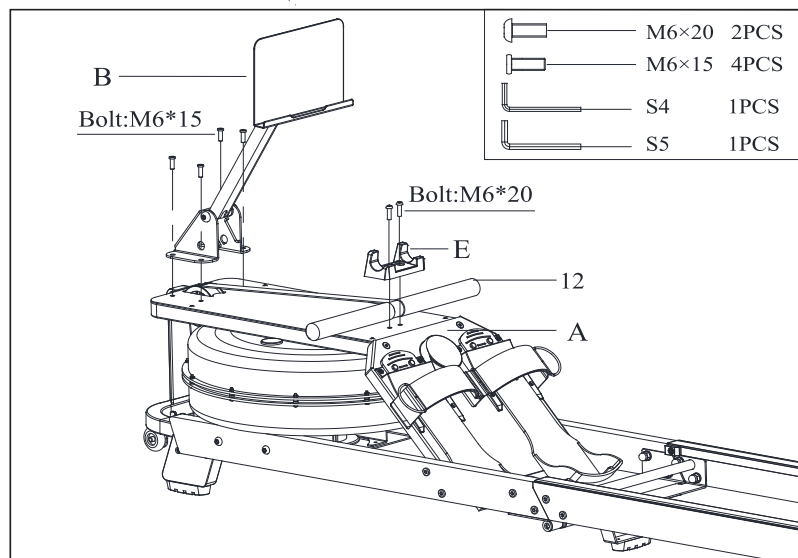 3.Use the removed M6*15 screws (4 pieces) to fix the tablet holder (D) onto the main unit.

**STEP 3:**

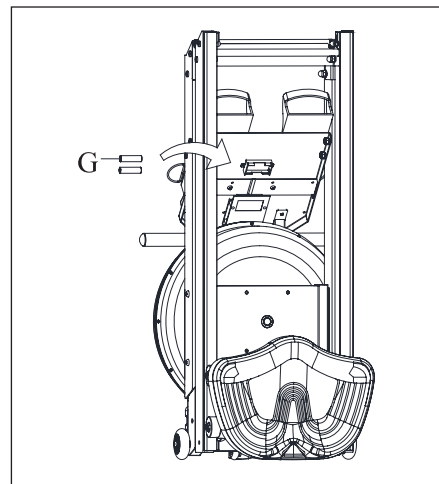 Battery installation: Install the AA batteries (G) into the battery box. The entire installation is now complete.




INSTRUCTIONS FOR USING PUMP

Make sure that all parts are properly tightened before using the rower:

1. Remove the tank plug (P) from the top of the tank,

2. To add water to the tank (Fig1)

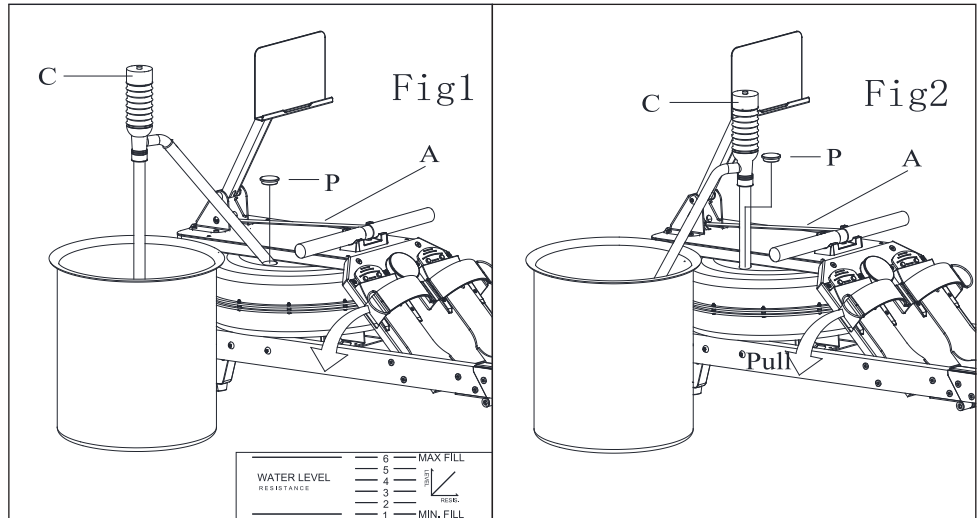 01. Insert the straight tube from water pump (C) into a container of water and the flexible tube from the water pump into the rower tank.



02. Make sure the container of water is higher than the rower water tank.

03. Squeeze the pump several times to add water to the rower tank until desired resistance level is achieved as per markings on the side of the tank.

04. The more water in the tank, the higher the resistance.

05. Install the tank plug (P) once water level is reached.

3. To empty the rower water tank, you need to reverse the filling procedure (Fig2)

Notes:

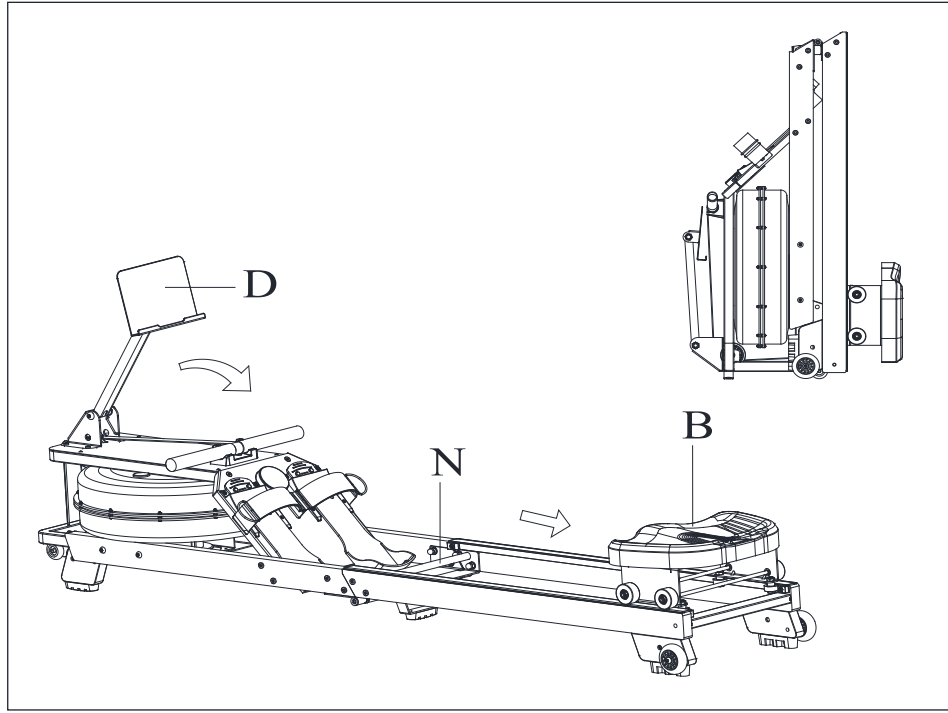 
- Only tap water should be used to fill the water tank. Adding water purifying tablets (included in the package) is allowed, but do not use low-quality water purifying tablets or bleach, as they can damage the water tank and will not be covered by the warranty.
- Add water purifying tablets every 3 months or as needed. If the water quality is extremely turbid, replace the water in the tank.
- The water drained from the tank is not suitable for consumption. Please handle it as wastewater.
- If the machine is not used for a long time, pump out the water from the tank and stand the machine upright.

Water Level Mark:

- The water level mark is located on the side of the water tank, and the maximum water level is indicated by level 6. Do not exceed this water level. Damages caused by exceeding the maximum water level are not covered by the warranty.
- The resistance depends on the water level inside the tank. Level 1 represents the lowest resistance, while level 6 represents the highest resistance.


How to Store the Machine

When folding the product, rotate the tablet holder (D) downward. Then, move the seat cushion (B) to the end (to prevent the seat cushion assembly from quickly falling and damaging the product when folding). Hold the round tube of the workpiece (N) with your hand and pull up slightly to prevent the seat cushion assembly from quickly falling and damaging the product when folding.




How to Adjust Pedal Strap

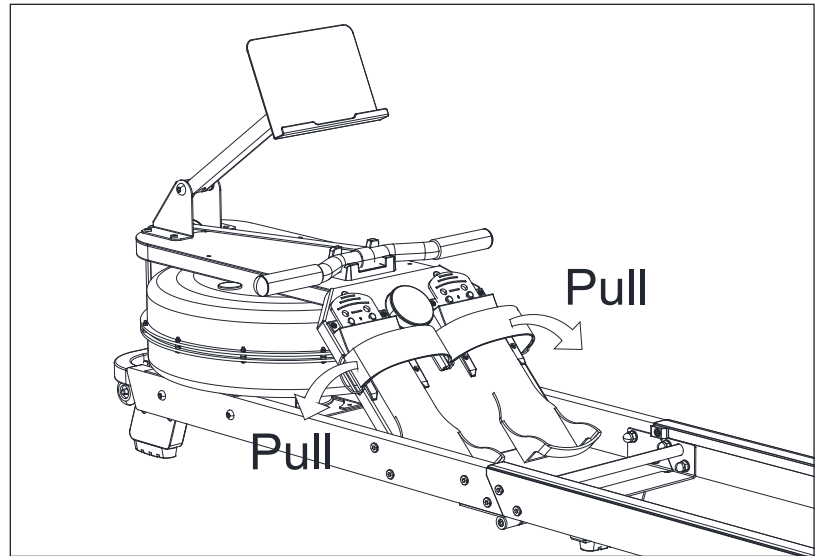 During use, sit on the seat cushion, place both feet on the adjustable pedal, adjust the pedal to the corresponding hole position based on the size of your feet, and then secure both feet with the foot strap. Pull the foot strap tight in the direction indicated in the diagram, then firmly stick it to both sides.




INSTRUCTIONS FOR DISPLAY

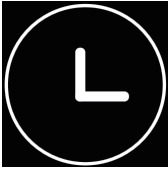 1.DATA DISPLAY INSTRUCTIONS

No.	Item	Display	Description
1	Time		00:00 ~ 99:59 After detecting motion, the timer starts counting. It stops counting 4 seconds after the motion stops.
2	Speed		The display range is from 0.0 to 99.9 km/h.
3	Distance		The display range is from 0.0 to 999.9 km.
4	Calories		The display range is from 0.0 to 9999 calories, with an energy consumption rate of 15 calories per kilometer.
5	WATT		The display range is from 0 to 999 watts.
6	Counts		The display range is from 0 to 9999.
7	500m pace		The display range is from 00:00 to 99:59.
8	SPM		The display range is from 0 to 199.
9	Bluetooth		Display: Bluetooth connected. Not displayed: Bluetooth not connected.

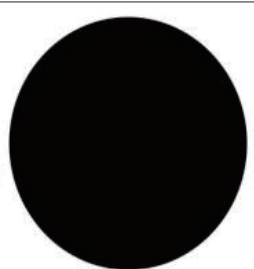 2. DISPLAY FUNCTION TABLE

No.	Item	Display	Description
1	Display Overview		1.It displays exercise data: "Time", "Speed", "Distance", "Calories", "WATT", "Strokes", "500m Pace", and "Stroke Frequency". 2. All Data are displayed in metric units. 3. The "Bluetooth symbol" indicates the Bluetooth connection status.
2	Pre-Workout Mode		1.Before training, the LED display only shows the symbols for time, distance, and calories. 2.Touch the display screen to cycle through these symbols. 3.Rotate the display to set the corresponding target values.
3	Target Setting Mode		1.Touch the display screen switch to the Time symbol, rotate the display to set the Time Target . (The setting for distance and calories is done in the same way as the time setting). The time setting value starts from 1 minute, the distance setting value starts from 0.5 kilometer, and the calorie setting value starts from 1.0. 2.After setting, start rowing directly. The LED display will automatically cycle through the following values: Time, Speed, Distance, Calories, Watts, Strokes, 500m Pace, and Stroke Frequency. 3.Touch the display screen to fix the current value. By touching it again, you can continue to cycle through the values until all have been displayed. then the LED display will return to automatic cycling. 4.If the training time reaches your target, the LED display will emit a "DiDi" sound.
4	Free Exercise Mode		1.Start rowing directly, the LED display will automatically start recording your training data. 2.In this case, you can fix the current value on the display by touching the display screen or rotating the display.
5	Sleep Mode		If you do not train for more than 4 minutes and no data is entered, the LED display will automatically enter sleep mode. By rowing again or touching the display screen, the LED display will automatically restart.
6	Reset Data		1.Press and hold the display screen can reset all the training data. 2.After replacing the battery, the total distance will be reset to zero.

3. DETAILED OPERATING INSTRUCTIONS

01. The display screen displays "Time", "Speed", "Distance", "Calories", "Watt", "Strokes", "500m Pace", and "Stroke Frequency" (Fig 1, Fig 2, Fig 3, Fig 4, Fig 5, Fig 6, Fig 7, Fig 8) in a default cycle, switching one per second.



Fig.1



Fig.2



Fig.3



Fig.4



Fig.5



Fig.6



Fig.7



Fig.8

02. Rotate the display clockwise to fix the displayed value on the corresponding function item in the following order: Time->Speed->Distance>Calories->Watt->Strokes->500m Pace->Stroke frequency->rotation (Fig 9, Fig 10, Fig 11, Fig 12, Fig 13, Fig 14, Fig 15, Fig 16). Rotate counterclockwise to fix the displayed value in the opposite order.



Fig.9



Fig.10



Fig.11



Fig.12



Fig.13



Fig.14



Fig.15



Fig.16

APP

- Search "KINOMAP" in the mobile app store to download the app.
- Please scan the QR code code for Bluetooth connection instructions.

Radio Frequency:2.4GHz

Radio Frequency Band:2402-2480MHz

Maximum RF Power:5.09dBm



FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radiocommunications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:-- Reorient or relocate the receiving antenna.--Increase the separation between the equipment and receiver.--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ISED CANADA STATEMENT

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation Science and Economic Development Canada's licence exempt RSS(s). Operation is subject to the following two conditions:

1) this device may not cause interference.

2) this device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure: This equipment complies with Canada radiation Exposure limits set forth for an uncontrolled environment to maintain compliance with IC's RF Exposure guidelines. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Manufactured in China for:
Sport Scandinavia A/S
Niels Bohrsvej 2. 9900 Frederikshavn. DK
Tel: +45 70 126 126. E-mail: Info@spsca.dk
www.spsca.dk